

# USB1.1 IP Core Setup

---

## Installation Guide



**System Level Solutions, Inc. (USA)**  
14100 Murphy Avenue  
San Martin, CA 95046  
(408) 852 - 0067

<http://www.slscorp.com>

IP Core Version: 1.7  
Document Version: 1.0  
Document Date: May 2015

## Introduction

This installation guide familiarizes you with the contents of the USB1.1 IP Core setup.

Table below shows the revision history of the installation guide.

Version	Date	Description
1.0	May 2015	First release

## How to Contact SLS

For the most up-to-date information about SLS products, go to the SLS worldwide website at <http://www.slscorp.com>. For additional information about SLS products, consult the source shown below.

Information Type	E-mail
Product literature services, SLS literature services, Non-technical customer services, Technical support.	<a href="mailto:support@slscorp.com">support@slscorp.com</a>

---



---

<i>About this Guide</i> .....	<i>ii</i>
Introduction .....	ii
How to Contact SLS .....	ii
<b>Software Installation</b> .....	<b>1</b>
Installing USB1.1 IP Core .....	1
Step1: Preparing to Install.....	1
Step2: Welcome to the SLS USB1.1 IP Installation Wizard .....	1
Step3: License Agreement .....	2
Step4: Choosing Destination Location .....	3
Step5: Start Copying the Program Files .....	4
Step5: License Information.....	5
Step6: Finish Installation .....	5
Step7: SLS USB1.1 ReadMe .....	6

This Installation Steps guides the user through the installation process of SLS USB1.1 IP Core.



We assume that following software are installed on your pc.

- Windows 2000, XP
- Quartus II 8.1, Nios II EDS 8.1


## Installing USB1.1 IP Core

The USB1.1 IP Core is provided as a setup for using it in various designs. Following steps shows the installation procedure for the IP Core setup file on your system.

### Step1: Preparing to Install

Double click on the **usb11\_ocp\_eval-v<IP Core Setup version#>.exe** file. It displays the message as shown in [Figure- 1](#).

*Figure -1. Install SLS USB1.1*

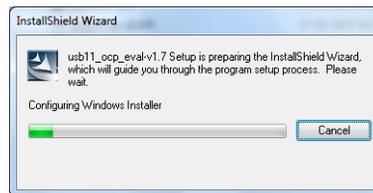

### Step2: Welcome to the SLS USB1.1 IP Installation Wizard


Then the next window appears showing the message, **‘Welcome to the Installshield Wizard for usb11\_ocp\_eval-v<IP Core Setup version#>’** appears as shown in [Figure- 2](#). There are two options available, **‘Next’** and **‘Cancel’**. Choose the correct option as per the requirement.

1. Choose **‘Next’** to continue the installation.

2. Choose **'Cancel'** to end the setup for installation. Selecting this option pops up a message window having options, **'Yes'** and **'No'**.
  - To continue the installation choose **'No'**.
  - To exit setup choose **'Yes'**.

---

*Figure -2. Welcome SLS USB1.1 IP Setup Wizard*

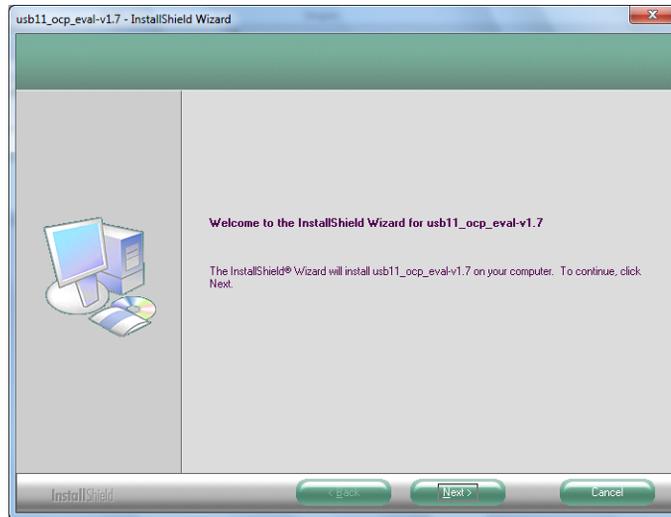


---

### Step3: License Agreement

The setup shows a **“License Agreement”** window. Accept the agreement in order to continue with setup. Select **“I accept the terms of license agreement”** option after reading the License terms as shown in [Figure- 3](#).


Figure -3. License Agreement

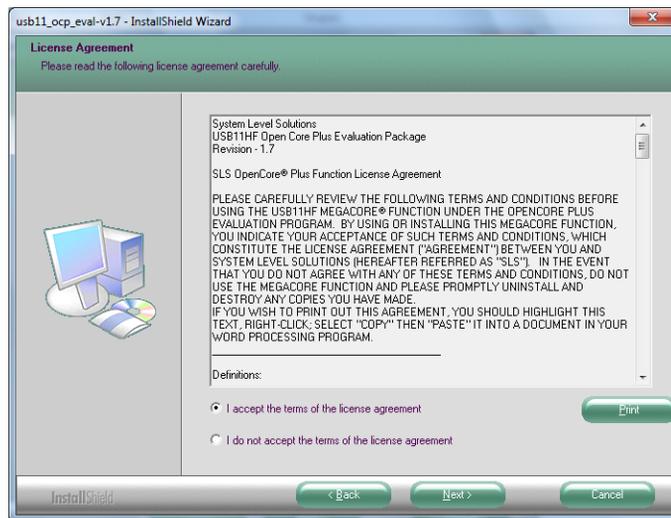

## Step4: Choosing Destination Location

The “**Choose Destination Location**” window appears asking the installation directory for USB1.1 IP Core. See [Figure- 4](#). For installing to a different folder, click “**Browse**” button. Choose ‘**Next**’ to continue the setup.

**Figure -4. Choose Destination Location**

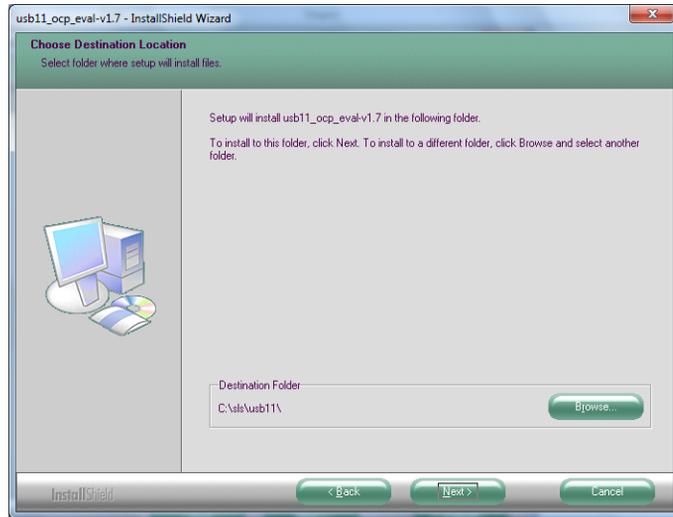


---

## Step5: Start Copying the Program Files

It starts copying the IP Core files to the directory selected. See [Figure- 5](#).


**Figure -5. Setup Status**

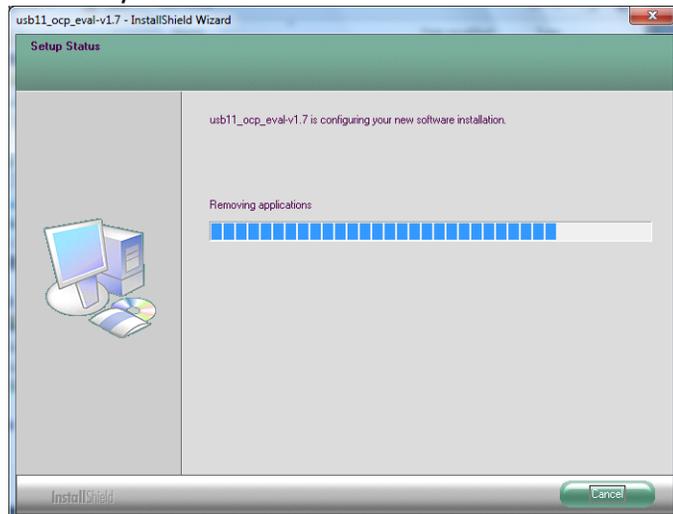

## Step5: License Information

After copying the files, the “**License Information**” window explaining the steps to request the license for IP Core. See [Figure- 6](#). Choose ‘**Next**’ to go to finish window.


*Figure -6. License Information*

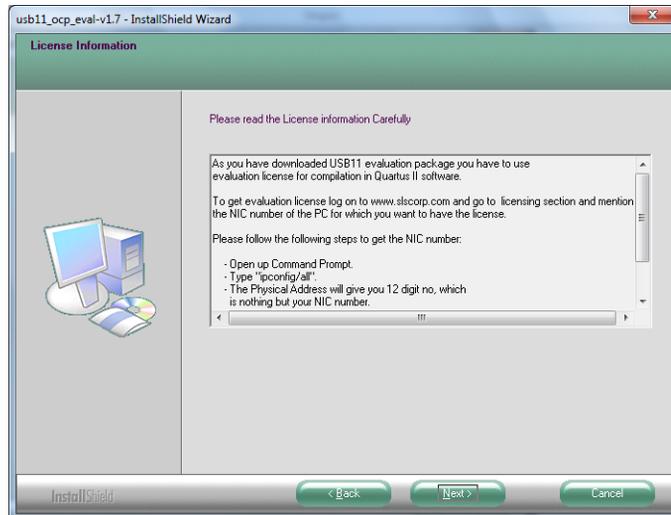

## Step6: Finish Installation

As the installation completes, last window will appear as shown in [Figure- 7](#). Choose ‘**Finish**’ to exit from the installation window.

Figure -7. InstallShield Wizard Complete

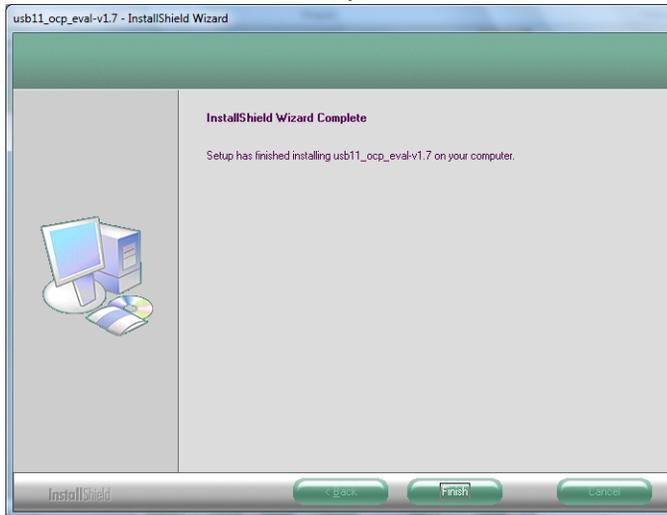


---

## Step7: SLS USB1.1 ReadMe

After successful installation of the SLS USB1.1 IP Core, it opens the ReadMe file. See [Figure- 8](#).

Figure 8. SLS USB1.1 IP Core After Installation

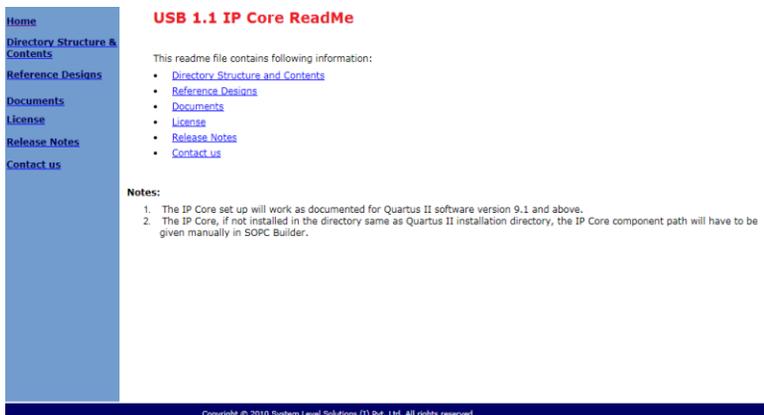



To verify the proper installation of USB1.1 IP core, make sure that the installed IP Core directory structure is same as the directory structure specified in the ReadMe file.

[Table 1](#) lists USB1.1 installation directory content and their description. The default Windows installation directory is `c:\sls`.

Directory Name	Description of Contents
documents	Contains USB1.1 User Guide, Tutorial, Windows 32 API User Guide, Nios II HAL API User Guide and readme help files.
embedded	Contains sample source files for applications with Nios II.
example	Contains Nios II source files. Nios II includes sample source files for Portinterface application.
hardware	Contains encrypted USB 1.1 IP Core design files, demonstrations files using the core, ready to use reference designs for the core and precompiled library for simulation.
ref_design	Contains ready to use reference designs for UP3 Education Kit (EP 1C12).
software	Contains SLSUSB driver files for Windows and Linux with application examples.
driver	Contains SLSUSB driver for Linux as well as Windows.
example	Contains USB 1.1 examples for Linux and Windows.
library	Contains USB 1.1 software libraries.
utilities	Contains USB 1.1 utilities. enumdataeditor, portinterface and usbview applications for windows 2000/XP.