IP Core License Setup Guide



Release Version: 1.0 Document Version: 1.0 Date: July 2015

Please follow the steps below for providing the license of encrypted IP core in Quartus II:

- 1. Open the Quartus II>Tools>License Setup...
- Then under License Setup/License file edit combo box, add semicolon and type the license file path <*Design Example Path*>/platform/core/ license of the IP core.

Make sure that you have given the license file extension ". dat".

3. Click **OK** and reopen the **Quartus II>Tool>License Setup**... IP core license will be added as shown in Figure 1.

Figure-1. License Setup

-								
	License Setup							
	icense file: E: designs\sis\sis_p_max10m08_eval\trunk\soc\syn\test_designs\altera_doud_des\sis_max10_addon_board_refdes\platform\core\license\sis-ip-licenses.dat							
	Use LM_LICENSE_FILE variable:	1800@192.168.0.72						
	Current license	urrent license cense Type: Full Version spiration: 09-may-2015		Web License Update				
	License Type: Expiration:			Begin 30-day Evaluation Period				
	Host ID Type: Host ID Value:	Not found Not found		✓ Wait for floating licenses				
Licensed AMPP/MegaCore functions:								
	Vendor	Product		Version	Expiration		Count	
	System Level Solutions, Inc (5750)	0A04	2015.12		31-dec-2020	Fixed		
	System Level Solutions, Inc (5750)	0A02	2014.12		31-dec-2020	Fixed		
	System Level Solutions, Inc (5750)	0C00	2014.12		31-dec-2020	Fixed		
	System Level Solutions, Inc (5750)	0400	2009.12		31-dec-2020	Fixed		